 


# FIELD REPLACEABLE UNIT DOCUMENTATION

Portege™


7020CT

## BATTERY PACK REMOVAL




- 1 Turn the computer upside down as shown
- 2 Push the **battery lock** to unlock position
- 3 Slide the **battery release lever** in the direction of the arrow
- 4 Pull the **battery pack** slightly forward and lift it out

## OPTIONAL PCMCIA CARD REMOVAL

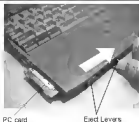

- 1 Pull out the **eject lever** of the PC card to be removed
- 2 Slide the **eject lever** to the right until the PC card is out
- 3 Grasp the PC card and remove it

## EXPANSION MEMORY REMOVAL

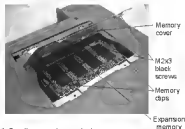

- 1 Turn the computer upside down
- 2 Remove **two M2x3 black screws** and remove the **memory cover**
- 3 Push the **memory clips** outward and pull the **expansion memory** out of the connector on a 45 degree angle

## HDD REMOVAL



- 1 Turn the computer upside down
- 2 Remove **one M2x14 black screw** securing the **HDD cover** and lift it out

# TOSHIBA

Tough Enough for Today's World.

# FIELD REPLACEABLE UNIT DOCUMENTATION

## Portege™

### 7020CT

#### HDD REMOVAL



HDD Plastic handle

- 3 Grasp the **plastic handle** and pull it towards your left to disconnect the **HDD**
- 4 Lift up the **plastic handle** to remove the **HDD**

**CAUTION:** Be very careful not to press on the **TOP** or **BOTTOM** of the **HDD**. Pressure can destroy data or damage the drive.

#### KEYBOARD REMOVAL



Keyboard cable PJ10

- 4 Lift the front of the **keyboard** pulling the keyboard forward until the **keyboard cable** is exposed
- 5 Disconnect the **keyboard cable** from **PJ10** on the system board and remove the **keyboard**

#### KEYBOARD REMOVAL



Keyboard Keyboard holder

- 1 Turn the computer right side up and open the display
- 2 Unlatch the **Keyboard holder** at the five points starting from the front side
- 3 Pull up on the front of the **keyboard holder** to release the latches along the back and lift the holder out

#### TOP COVER REMOVAL



M2x6 brass screw M2x6 silver screw

LCD cable

PJ3

Microphone Cable

PJ34

Speaker Cable

PJ720

PJ9

Membrane switch cable

M2x4 brass screws

M2x6 brass screw

FL inverter cable

PJ4

- 1 Turn the computer right side up and open the cover
- 2 Use a tweezer to gently remove the **LCD cable** from **PJ3** and the **FL inverter cable** from **PJ4**
- 3 Disconnect the **membrane switch cable** from **PJ9**
- 4 Remove **one M2x6 silver screw**

# TOSHIBA

Tough Enough for Today's World.


**Portege™**

**7020CT**

## TOP COVER REMOVAL




- 5 Turn the computer upside down
- 6 Remove **two screws** securing the **docking connector cover** and lift the cover out
- 7 Remove the following thirteen screws securing the bottom cover:
  - 7 M2.5x6 black screws
  - 4 M2x6 black screws
  - 2 M2x14 black screws

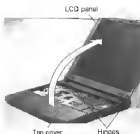


- 8 Turn the computer right side up and open the **LCD panel** holding both **hinges** of the top cover
- 9 Lift up the front of the **top cover** and tilt the display back until it lies flat
- 10 Disconnect the LED cable from PJ303 to separate the top cover with display assembly from the bottom cover

## RTC BATTERY REMOVAL

 

- 1 Disconnect the **RTC battery cable**
- 2 Remove the **tape** securing the **RTC battery cable**
- 3 Lift out the **RTC battery**

## SYSTEM BOARD REMOVAL

 

- 1 Remove one **M2x4 brass screw** securing the **LED board** and disconnect the board from **PJ32**
- 2 Disconnect the **Sound jack board** from **PJ33**

# TOSHIBA

 
**Tough Enough for Today's World.**

# FIELD REPLACEABLE UNIT DOCUMENTATION


## Portege™

### 7020CT

#### SYSTEM BOARD REMOVAL




 - 2 Remove 9 screws securing the system board
  - 4 M2x6 brass screws
  - 2 M2x4 brass screws
  - 3 M2x3 brass screws
- 3 Lift out the **modemjack** from the bottom cover



- 4 Lift out the **system board**
- 5 Remove **two metal braces** from the system board
- 6 Disconnect the **DC IN cable** from PJ802 on the back of the system board

#### PC CARD SLOT REMOVAL

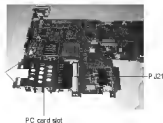

- 1 Disconnect the **PC card slot** from PJ21 on the system board

#### MODEM REMOVAL



- 1 Grasp the **modem board**
- 2 Pull the **modem board** and disconnect it from PJ7 on the system board
- 4 Disconnect the **modem jack cable** from PJ102 on the modem board


# TOSHIBA

Tough Enough for Today's World.

## Portege<sup>TM</sup>

### 7020CT

#### DISPLAY MASK REMOVAL

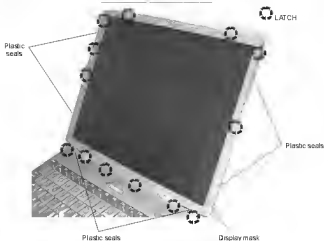

- 1 Remove **six plastic seals** covering **six screws**
- 2 Remove **two M2.5x5 flat head silver screws** and **four M2x5 flat head silver screws** securing the **display mask**
- 3 There are **13 latches** securing the display mask. Carefully insert your fingers between the **display mask** and the **LCD panel** and pry open the latches starting from the **top two latches**, to the **five latches on the right and left sides** ending with the **six bottom latches**

# TOSHIBA

Tough Enough for Today's World.

**Portege<sup>TM</sup>**

**7020CT**

## FL INVERTER AND LCD REMOVAL



CN1

LCD cable



- 1 Lift up the **FL inverter board** and disconnect the **FL cable** from **CN2** and the **FL inverter cable** from **CN1**
- 2 Carefully rotate the **LCD module** from right to left of the LCD cover
- 3 Disconnect the **LCD cable** from **CN1** on the **LCD module** and remove the **LCD** from the computer

# TOSHIBA

**Tough Enough for Today's World.**